

SATURN HF MOBILE ANTENNAS AND PARTS

RFI Order Code	DESCRIPTION
HFMA	Antenna complete with base, coil and whip
HF-BASE	Stainless steel die-cast base assembly - complete with mounting hardware
HF-LB-ANT	Antenna complete with base and whip
HF-SPRING	Stainless steel spring Assembly
HF-WA	108 Inch whip adaptor
HF-STUD1	Stud to fit base of coil
HF-STUD-2	Stud for base mounting
WHIP-108I	Whip adaptor for 108 Inch Whip
HFLC1	HF loading coil 1.5 to 2 MHz.
HFLC2	HF loading coil 2 to 3 MHz.
HFLC3	HF loading coil 3 to 4 MHz.
HFLC4	HF loading coil 4 to 6.5 MHz.
HFLC5	HF loading coil 5 to 8.5 MHz.
HFLC6	HF loading coil 6 to 10 MHz.
HFLC8	HF loading coil 8 to 13 MHz.
HFLC12	HF loading coil 12 to 18 MHz.
HFLC15	HF loading coil 15 to 21 MHz.
HFLC21	HF loading coil 21 to 24 MHz.
HFLC24	HF loading coil 24 to 26 MHz.
	(26.5 to 88MHz. No coil required - trim whip)
HFLCATU	HF loading coil 1 to 30 MHz. (Use ATU on radio)

All spares are available for the Saturn product.

- Whip adaptors
- Allen socket head screws
- Allen grub screws
- 108 Inch 17/17PH stainless steel whips
- Stainless steel die cast bases
- All installation hardware for the bases
- Stainless steel shock springs and spring inserts
- All studs used on the product.
- All stainless steel bolts and washers.
- All solder lugs used on the product.

